











# G1710 Serials

**High Precision FOG Integrated Navigation System** 

**Technical Manual** 



#### Precision FOG Integrated Navigation System



### Introduction

The BW-GI710 is a high-performance, high-precision fiber optic integrated navigation system developed by Bewis for the aerial mapping, unmanned aerial vehicles, sea-based and roadbed. Built-in three-axis fiber optic gyroscope, three-axis accelerometer, optional three-axis magnetic sensor, highprecision air pressure sensor, including a BD/GPS/GLONASS three-mode receiver. It can measure the speed, position, attitude of the carrier, and output the compensated angular rate, acceleration, magnetic field, air pressure, temperature and other information.

The BW-GI710 is equipped with a new integrated navigation sensor fusion algorithm engine. It is optimized for multipath interference and can meet the needs of long-term, high-precision and highreliability navigation applications in urban and outdoor complex environments. The product supports a variety of sensors such as GNSS/Odometer/DVL/barometric altimeter and has excellent scalability. It combines inertial measurement with satellite navigation and odometer information through multisensor data fusion technology. These can greatly improve the system's geographical adaptability. BW-GI710 integrated navigation system adopts coupling technology. It combines high-precision, professional-grade, multi-channel, dual-antenna single-frequency carrier phase and pseudo-range GPS receivers with high-precision fiber inertial measurement units. It has the characteristics of small size, light weight and high performance.

# **Applications**

- Long-range Flight Guidance, Antenna System Stability
- Attitude/Azimuth Reference System, Multi-beam Attitude Sensing
- Railway Track Inspection Vehicles, Drones, Unmanned Navigation and Control
- Space Stabilization Platform, Mine Tunneling Machine, Coal Mining Machine Intelligent Navigation and Control

# **Specifications**






# Performance Specifications

External GPS effective 4m baseline	Self-seeking north precision(deg)	≤5	
	Azimuth accuracy(deg)	≤0.05	
	Attitude angle accuracy(deg)	≤0.05	
	Speed accuracy(m/s)	≤0.03	
	Position accuracy(m)	≤2m/RTK 1cm	
GPS failure	Azimuth maintaining accuracy(deg)	≤1, 1h	
	Attitude angle maintaining accuracy(deg)	≤0.03, 1h	
	Position accuracy(km)	≤15, 0.5h	
System measurement range	Azimuth measurement range(deg)	±180	
	Attitude measurement range(deg)	±90	
	Measuring range (deg/s)	±1000	
	Bias stability (°/h)	0.5	
Gyro	Bias repeatability (°/h)	0.5	
	Random walk coefficient (°/√h)	≤0.05	
	Scale factor nonlinearity (ppm)	≤150	
	Scale factor asymmetry (ppm)	≤150	
	Scale factor repeatability (ppm)	≤150	
Accelerometer	Measuring range (g)	±10	
	Bias stability (mg)	0.1	
	Bias repeatability (mg)	0.1	
	Scale factor repeatability (ppm)	≤300	
	Working temperature (°C)	-40 ~ +65	
Environmental	Storage temperature (°C)	-45 ~ +70	
parameters	Vibration (Hz, g2/Hz)	10 ~ 2000,0.06	
	Shock (g, ms)	30,11	
Electrical parameters	Input voltage (Vdc)	+9~+36	
	Power (W)	15	
	Data output format	RS-422	
	Data refresh rate(Hz)	100	
Physical parameters	Size (mm)	≤Φ80*72	
	Weight (kg)	0.8	
	Connector	J30J-15TJP	

# **Product Size**

Product Size: Φ80×H72 (mm)

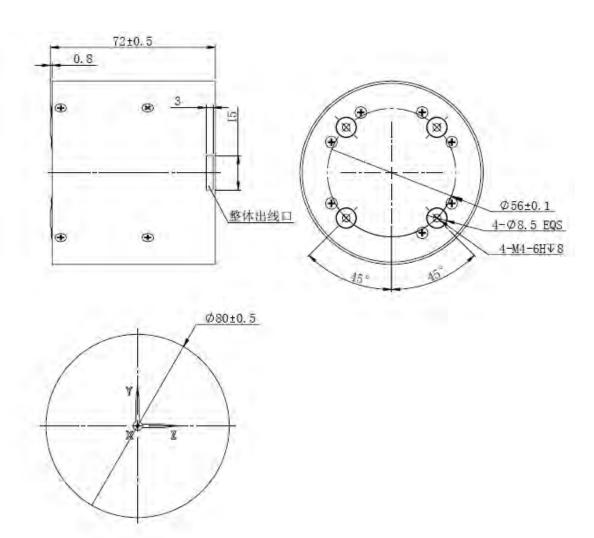


Note: Unfilled dimensional tolerances are performed in accordance with GB/T1804-2000 Class C.


### High Precision FOG Integrated Navigation System

### **Product installation**

The correct installation method can avoid measurement error. The inertial measurement unit produces an absolutely smooth surface by grinding on the underside and measuring surface for installation .The following points should be made when installing the sensor:

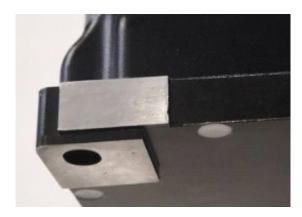

First of all, to ensure that the sensor mounting surface and the measured surface completely close, the measured surface should be as horizontal as possible, so that we can reduce installation error. Secondly, when the product is installed, the bottom surface of the IMU and the body should be coincident, and it is gently pushed to make the measurement surface of the IMU coincide with that of the machine body, so that both surfaces are tightly attached, and there is no angle in Fig.A and Fig.C.The correct installation is shown in Fig.B and Fig.D.

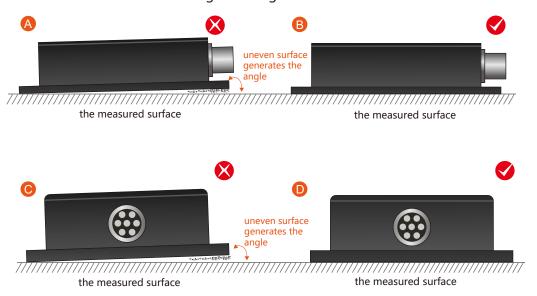

Finally, after the product is tightly attached, screws should be used to fix the IMU to ensure tight fixation, smooth conduct and stable rotation. Measurement errors caused by acceleration and vibration should be voided. Bear in mind that the screw only plays a fixed role and doe not have a positioning function. The screw hole of the IMU is processed into an elliptical shape for easy adjustment.



# **Electrical connections**


Data cable RS422 interface definition, DB9 female:

DB9 connector pin	Interface definition Remarks		
1	R+	Receive +	
2	R-	Receive -	
3	T+	Transmit +	
4	T-	Transmit -	

# **Debugging software**

#### Software usage steps:

- Ensure that the inertial navigation is absolutely static, correctly connect the serial port hardware of the integrated navigation, and connect the power supply.
- Select the computer serial port and baud rate and click to connect to the serial port.
- ③ Enter the correct geographic latitude, click Inertial Navigation Start→Command Input, the working status on the screen shows static alignment, and the working state becomes INS navigation. At this time, the inertial navigation enters the working state and can be used.

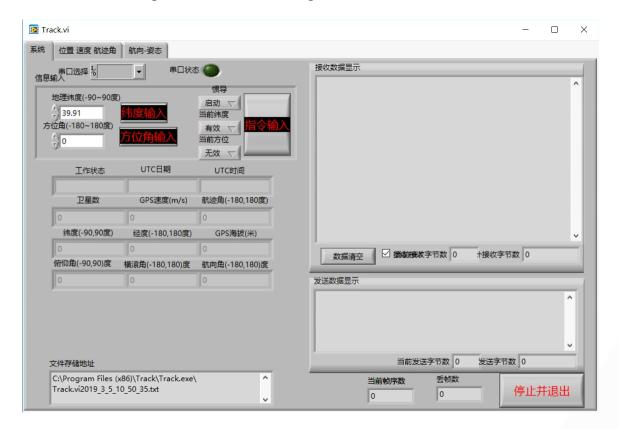



# **Protocol**

After the system is powered on, the normal operating time is 20Hz frequency, RS422 communication 115200bps, n, 8, 1 broadcast broadcast navigation data, 48 bytes per frame data as shown in the following table:

		tion data		
Byte number	Content	Data type	Byte count	
1-2	Frameheader: 0X5A0X A5	Byte	2	
3	Workingstatus:0- Monitoring			
	status,1-Staticalignment,2-INS	Byte	1	
	navigation			
4-5	Inertialpitchangle([-90,90]		2	
4-5	degrees) in units of 0.01 degrees		2	
6-7	Inertialguiderollangle			
	([-180,180]degrees), unit 0.01		2	
	degree			
	Inertialazimuth([-180,180]			
8-9	degrees), northto eastis -, north		2	
	to west is +, unitis 0.01 degrees			
10-11	nertialX-axisangularvelocity			
	Wx(degree/s) in units of 0.01		2	
	deg/s			
	nertial Y-axis angular velocity			
12-13	Wy(degree/s) in units of 0.01		2	
	deg/s			
	nertial Z-axis angular velocity			
14-15	Wx(degree/s) in units of 0.01	Short int (low byte first, high byte	2	
	deg/s	last)		
16-17	Inertial X-axis acceleration Ax(m/		2	
10-17	s / s), unit0.01m / s/s		2	
18-19	Inertial Y-axisaccelerationAy (m /		2	
18-19	s/s), unit 0.01m/s/s		2	
20-21	Inertial Z-axis acceleration Az (m /		2	
20-21	s / s), unit0.01m / s/s		2	
22-23	Speed after GPS satellite		2	
22-23	positioning, unit 0.1 m / sec		2	
	GPS trackangle([-180,180]	Γ		
24-25	degrees), north to the east is -,		2	
24-23	north to west is +, the unit is 0.1		2	
	degrees			
26-27	GPS satellite number	·	2	
28-29	GPS altitude, unit 0.1 m		2	
		Float(low byte first, high byte		
30-33	Latitude after GPS satellite	after), value range [-90,90]	4	
	positioning, unit degree	degrees, the north latitude is+	4	
		and the south latitude is		
34-37	Langitude offer CDC actallity	Float (low byte first, high byte	first, high byte	
	Longitude after GPS satellite	after), value range[-180,180]		
	positioning, unit degree	degrees, east longitude is +, west		



High Precision FOG Integrated Navigation System

# **Executive standard**

- Enterprise Quality System Standard: ISO9001:2008 Standard (Certificate No.:23919Q1045IROS)
- CE certification (certificate number: M.2019.103.UY1151)
- ROHS (certificate number: G 190930099)

# G1710

# High Precision FOG Integrated Navigation System

## Wuxi Bewis Sensing Technology LLC

Address: Building 30, No. 58 Xiuxi Road, Binhu District, Wuxi City

Hotline: 400-618-0510 Tel: +86 510 85737178-801 Email: sales@bwsensing.com Website: www.bwsensing.com