





GI830 Serials

High Precision FOG Integrated Navigation System

Technical Manual

High Precision FOG Integrated Navigation System



GI830

Introduction

ESENSING

The BW-GI830 is a high-performance, high-precision fiber optic integrated navigation system developed by Bewis for the aerial mapping, unmanned aerial vehicles, sea-based and roadbed. Built-in three-axis fiber optic gyroscope, three-axis accelerometer, optional three-axis magnetic sensor, high-precision air pressure sensor, including a BD/GPS/GLONASS three-mode receiver. It can measure the speed, position, attitude of the carrier, and output the compensated angular rate, acceleration, magnetic field, air pressure, temperature and other information.

The BW-GI830 is equipped with a new integrated navigation sensor fusion algorithm engine. It is optimized for multipath interference and can meet the needs of long-term, high-precision and high-reliability navigation applications in urban and outdoor complex environments. The product supports a variety of sensors such as GNSS/odometer/DVL/barometric altimeter and has excellent scalability. It combines inertial measurement with satellite navigation and odometer information through multi-sensor data fusion technology. These can greatly improve the system's geographical adaptability. BW-GI830 integrated navigation system adopts coupling technology. It combines high-precision, professional-grade, multi-channel, dual-antenna single-frequency carrier phase and pseudo-range GPS receivers with high-precision fiber inertial measurement units. It has the characteristics of small size, light weight and high performance.

Applications

- Long-range Flight Guidance, Antenna System Stability
- Attitude/Azimuth Reference System, Multi-beam Attitude Sensing
- Railway Track Inspection Vehicles, Drones, Unmanned Navigation and Control
- Space Stabilization Platform, Mine Tunneling Machine, Coal Mining Machine Intelligent Navigation and Control

Specifications




Performance Specifications

| | Self-seeking north precision(deg) | ≤4 | |
|---------------------------------------|--|----------------|--|
| | Azimuth accuracy(deg) | ≤0.05 | |
| External GPS effective 4m baseline | Attitude angle accuracy(deg) | ≤0.05 | |
| | Speed accuracy(m/s) | ≤0.03 | |
| | Position accuracy(m) | ≤2m/RTK 1cm | |
| | Azimuth maintaining accuracy(deg) | ≤0.8, 1h | |
| GPS failure | Attitude angle maintaining accuracy(deg) | ≤0.08, 1h | |
| 5. 5. 2.1010 | Position accuracy(km) | ≤12, 0.5h | |
| System measurement | Azimuth measurement range(deg) | ±180 | |
| range | Attitude measurement range(deg) | ±90 | |
| | Measuring range (deg/s) | ±1000 | |
| | Bias stability (°/h) | 0.8 | |
| | Bias repeatability (°/h) | 0.8 | |
| Gyro | Random walk coefficient (°/√h) | ≤0.08 | |
| | Scale factor nonlinearity (ppm) | ≤150 | |
| | Scale factor asymmetry (ppm) | ≤150 | |
| | Scale factor repeatability (ppm) | ≤150 | |
| | Measuring range (g) | ±10 | |
| | Bias stability (µg) | 70 | |
| Accelerometer | Bias repeatability (µg) | 70 | |
| | Scale factor repeatability (ppm) | ≤300 | |
| | Working temperature (°C) | -40 ~ +65 | |
| Environmental | Storage temperature (°C) | -45 ~ +70 | |
| parameters | Vibration (Hz, g2/Hz) | 20~2000,0.06 | |
| | Shock (g, ms) | 30,11 | |
| Electrical parameters | Input voltage (Vdc) | +9~+36 | |
| | Power (W) | 20 | |
| | Data output format | RS-422 | |
| | Data refresh rate(Hz) | 100 | |
| | Size (mm) | ≤145×121.5×125 | |
| Physical parameters | Weight (kg) | 2.5 | |
| | Connector | Y11P-1210ZK10 | |



Product Size

Product Size: L145×W121.5×H125 (mm)

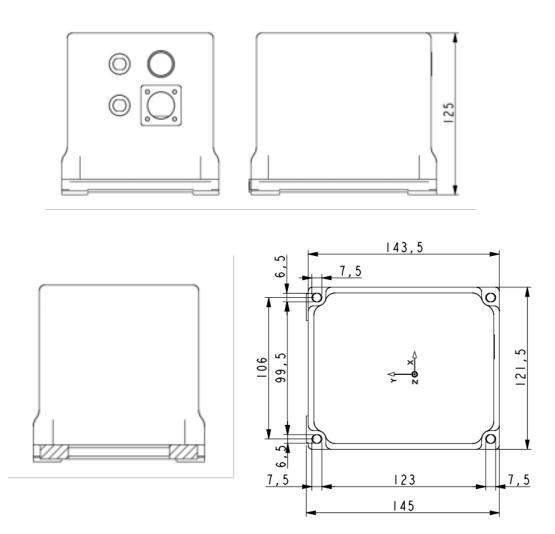

Note: Unfilled dimensional tolerances are performed in accordance with GB/T1804-2000 Class C.




Product installation

The correct installation method can avoid measurement error. The inertial measurement unit produces an absolutely smooth surface by grinding on the underside and measuring surface for installation .The following points should be made when installing the sensor:



First of all, to ensure that the sensor mounting surface and the measured surface completely close, the measured surface should be as horizontal as possible, so that we can reduce installation error.

Secondly, when the product is installed, the bottom surface of the IMU and the body should be coincident, and it is gently pushed to make the measurement surface of the IMU coincide with that of the machine body, so that both surfaces are tightly attached, and there is no angle in Fig.A and Fig.C.The correct installation is shown in Fig.B and Fig.D.

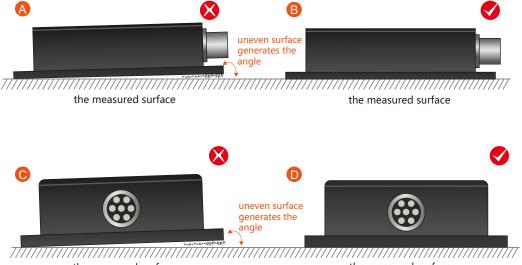

the measured surface the measured surface

Finally, after the product is tightly attached, screws should be used to fix the IMU to ensure tight fixation, smooth conduct and stable rotation. Measurement errors caused by acceleration and vibration should be voided.Bear in mind that the screw only plays a fixed role and doe not have a positioning function. The screw hole of the IMU is processed into an elliptical shape for easy adjustment.



Electrical connections

Data cable RS422 interface definition, DB9 female:

| DB9 connector pin | Interface definition | Remarks | |
|-------------------|----------------------|------------|--|
| 1 | R+ | Receive + | |
| 2 | R- | Receive - | |
| 3 | T+ | Transmit + | |
| 4 | T- | Transmit - | |

Debugging software

Software usage steps:

- Ensure that the inertial navigation is absolutely static, correctly connect the serial port hardware of the integrated navigation, and connect the power supply.
- ② Select the computer serial port and baud rate and click to connect to the serial port.
- (3) Enter the correct geographic latitude, click Inertial Navigation Start→Command Input, the working status on the screen shows static alignment, and the working state becomes INS navigation. At this time, the inertial navigation enters the working state and can be used.

| Track.vi 位置速度航迹角 | | - | |
|--|----------------------|--|------------------------------|
| 息输入 中口选择 3 地理纬度(-90~90度 39.91 方位角(-180~180度) | | 使导 启动 ▽ 当前纬度 有效 ▽ <mark>指令输入</mark> | 接收数据显示 |
| 工作状态 | UTC日期 | 当前方位 无效 UTC时间 | |
| 卫星数 | GPS速度(m/s) | 航迹角(-180,180度) | |
| ⁰ 纬度(-90,90度) | 经度(-180,180度) | 0 GPS海拔(米) | |
| 0 | 0 | 0 | |
| 俯仰角(-90,90)度 | 橫滾角(-180,180)度 | 航向角(-180,180)度 | 数据清空 一 资料研究收字节数 0 计接收字节数 0 |
| 0 | 0 | 0 | 发送数据显示 |
| 文件存储地址 | | | ▲ 当前发送字节数 0 发送字节数 0 |
| | x86)\Track\Track.exe | ^ | コードリス 0 2025 F いま 0 当前帧序数 |
| Track.vi2019 3 5 | | | |

BEWIS SENSING TECHNOLOGY LLC www.bwsensing.com Tel: +86 510 8573 7158



Protocol

After the system is powered on, the normal operating time is 20Hz frequency, RS422 communication 115200bps, n, 8, 1 broadcast broadcast navigation data, 48 bytes per frame data as shown in the following table:

| | - | tion data | | |
|-------------|--------------------------------------|--|------------|--|
| Byte number | Content | Data type | Byte count | |
| 1-2 | Frameheader: 0X5A0XA5 | Byte | 2 | |
| | Workingstatus:0-Monitoring | | | |
| 3 | status,1-Staticalignment,2-INS | Byte | 1 | |
| | navigation | | | |
| 4-5 | Inertialpitchangle([-90,90] | | 2 | |
| | degrees) in units of 0.01 degrees | | 2 | |
| | Inertialguiderollangle | | | |
| 6-7 | ([-180,180]degrees), unit 0.01 | | 2 | |
| | degree | | | |
| | Inertialazimuth([-180,180] | 1 | | |
| 8-9 | degrees), northto eastis -, north | | 2 | |
| | to west is +, unitis 0.01 degrees | | | |
| | nertialX-axisangularvelocity | Γ | | |
| 10-11 | Wx(degree/s)in units of 0.01 | | 2 | |
| | deg/s | | | |
| | nertial Y-axis angular velocity | | | |
| 12-13 | Wy(degree/s) in units of 0.01 | | 2 | |
| | deg/s | | | |
| | nertial Z-axis angular velocity | | | |
| 14-15 | Wx(degree/s)in units of 0.01 | Short int (low byte first, high byte | 2 | |
| | deg/s | last) | | |
| 16-17 | Inertial X-axis acceleration Ax(m/ | | 2 | |
| 10-17 | s / s), unit0.01m / s/ s | | ۲ | |
| 18-19 | Inertial Y-axisaccelerationAy (m / | | 2 | |
| 10-15 | s/s), unit 0.01m/s/s | | ۷. | |
| 20-21 | Inertial Z-axis acceleration Az (m / | | 2 | |
| 20-21 | s / s), unit0.01m / s/ s | | Z | |
| 22.22 | Speed after GPS satellite | | 2 | |
| 22-23 | positioning, unit0.1 m / sec | | Z | |
| | GPS trackangle([-180,180] | Γ | | |
| 24-25 | degrees), north to the east is -, | | 2 | |
| 24-25 | north to west is +, the unit is 0.1 | | 2 | |
| | degrees | | | |
| 26-27 | GPS satellite number | 1 | 2 | |
| 28-29 | GPS altitude, unit 0.1 m | | 2 | |
| | | Float(low byte first, high byte | | |
| 30-33 | Latitude after GPS satellite | after GPS satellite after), value range [-90,90] | Л | |
| | positioning, unit degree | degrees, the north latitude is + | | |
| | | and the south latitude is | | |
| | | Float (low byte first, high byte | | |
| 34-37 | Longitude after GPS satellite | after), value range[-180,180] | 4 | |
| | positioning, unit degree | degrees, east longitude is +, west | | |

Executive standard

P#SENSING

- Enterprise Quality System Standard: ISO9001:2008 Standard(Certificate No.:10114Q16846ROS)
- CE certification (certificate number: 3854210814)
- ROHS (certificate number: SO81426003)
- GJB 2426A-2004 Fiber Optic Gyro Test Method
- GBT 18459-2001 sensor main static performance index calculation method
- JF 1059-1999 Evaluation and Expression of Measurement Uncertainty
- GBT 14412-2005 mechanical vibration and shock mechanical installation of accelerometer
- General requirements for GJB 450A-2004 equipment reliability
- Quality control of key parts and important parts of GJB 909A
- GJB 899 Reliability Qualification and Acceptance Test
- GJB 150-3A high temperature test
- GJB 150-4A low temperature test
- GJB 150-8A rain test
- GJB 150-12A dust test
- GJB 150-16A vibration test
- GJB 150-18A impact test
- GJB 150-23A Tilt and Swing Test
- GB/T 17626-3A RF electromagnetic radiation immunity test
- GB/T 17626-5A surge (hit) impulse immunity test
- GB/T 17626-8A power frequency magnetic field immunity test
- GB/T 17626-11A voltage dips, short interruptions and voltage changes immunity
- GB/T 2423.22-2012 Environmental testing Part 2:test method Test N:temperature change (IEC 60068-2-14:2009,IDT)
- GB/T 10125-2012Artificial atmosphere corrosion test Salt spray test (ISO 9227:2006,IDT)

GI830 High Precision FOG Integrated Navigation System

Wuxi Bewis Sensing Technology LLC

Address: Building 30, No. 58 Xiuxi Road, Binhu District, Wuxi City Hotline: 400-618-0510 Tel: +86 510 85737178-801 Email: sales@bwsensing.com Website: www.bwsensing.com