



BWN826 Series

Digital Dual Axis Inclinometer

Technical Manual

V3.0



Introduction

BWN826 is a cost-effective dual-axis inclinometer developed and produced by Bewis Sensing. It adopts MEMS technology and current output. The measurement range is $\pm 30^\circ$, the highest accuracy is 0.01° , and the working temperature is -40°C to $+85^\circ\text{C}$. The product uses a high-precision MEMS accelerometer and a high-resolution differential digital-to-analog converter, with built-in automatic compensation and filtering algorithms, which largely eliminates errors caused by environmental changes. Convert the change of the static gravity field into the inclination change, and directly output the horizontal inclination value through the voltage method. This product has high long-term stability, low temperature drift, simple use, and strong ability to resist external interference. It is a recommended choice to be used for surveying and mapping, industrial automation and other industries.

Features

- Dual axis inclination measurement
- Resolution: 0.001°
- Power supply: 9-36V
- Dimension: L90*W40.5*H26 (mm)
- Highest accuracy: 0.01°
- Range: $\pm 30^\circ$
- Output mode: RS232/RS485/TTL optional
- IP67 Protection level

Application

- Dangerous building monitoring
- Bridge monitoring
- Satellite antenna positioning
- Laser level
- Slope monitoring
- Structural deformation monitoring
- Piling monitoring
- Ancient building protection monitoring

Product Feature



Electrical index

| Parameter | Condition | Minimum | Typical | Maximum |
|----------------------------|-----------|---------|---------|---------|
| Power voltage(V) | | 9 | 12 | 36 |
| Working Current (mA) | No load | 20 | 30 | 40 |
| Operating Temperature (°C) | | -40 | 25 | 85 |
| Storage Temperature (°C) | | -55 | 25 | 100 |



Performance index

| | | |
|---------------------------------|----------------------------|-----------|
| Measurement Range (°) | Condition | ±30 |
| Measurement axis | | X-Y |
| Accuracy (°) | Highest | 0.01 |
| Resolution (°) | Completely still | 0.001 |
| Zero bias (°/°C) | -40~85°C | ±0.001 |
| Start-up time | | < 3s |
| Output frequency (Hz) | 5-100Hz adjustable | Up to 100 |
| Mean time between failures MTBF | ≥90000 h | |
| Electromagnetic compatibility | According to GBT17626 | |
| Insulation resistance | ≥100 MΩ | |
| Impact resistance | 2000g, 0.5ms, 3 times/axis | |

Resolution: The smallest change value of the measured value that the sensor can detect and distinguish within the measurement range.

Accuracy: The root mean square error of the actual angle and the sensor measuring angle for multiple (≥16 times) measurements.




Mechanical Index

| | |
|------------------|------------------------------------|
| Connector | Metal Joint (Cable 1.5m) |
| Protection level | IP67 |
| Shell material | Magnesium aluminum alloy oxidation |
| Installation | Four M4 screws |




Package product size

Product size: L90*W40.5*H26 (mm)

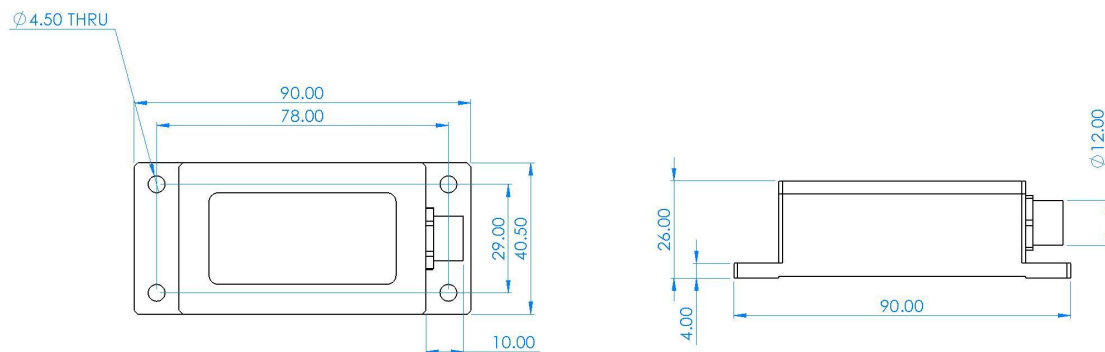

Bara board product size

The front of device is 3.85mm, the back is 2.5mm, the thick of the board is 2.0mm

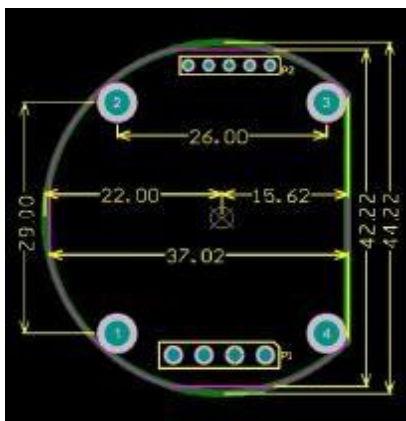





Installation

The correct installation method can avoid measurement errors. When installing the sensor, please do the following:

First of all, make sure that the sensor mounting surface is completely close to the measured surface, and the measured surface should be as level as possible, and there should be no included angles as shown in Figure A and Figure C. The correct installation method is shown in Figure B and Figure D.

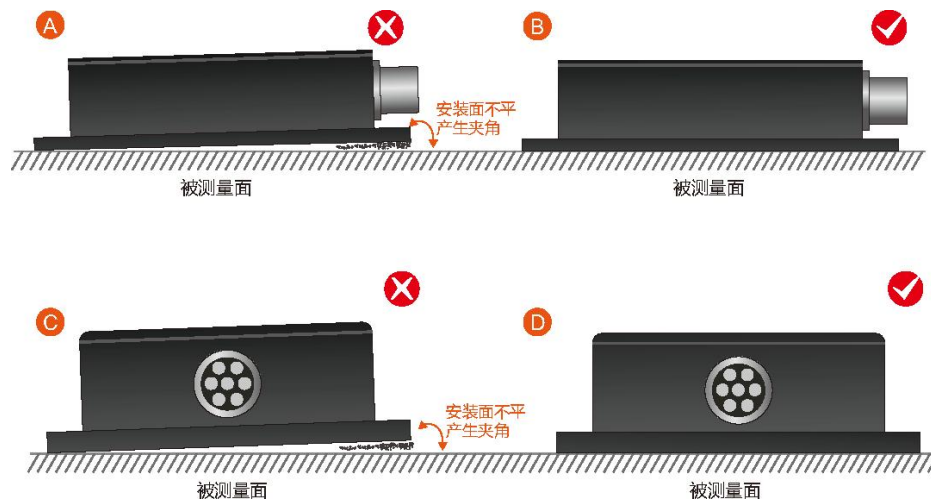

Secondly, the bottom line of the sensor and the axis of the measured object cannot have an angle as shown in Figure E, and the bottom line of the sensor should be kept parallel or orthogonal to the axis of rotation of the measured object during installation. This product can be installed horizontally or vertically (vertical installation needs to be customized), and the correct installation method is shown in Figure F.

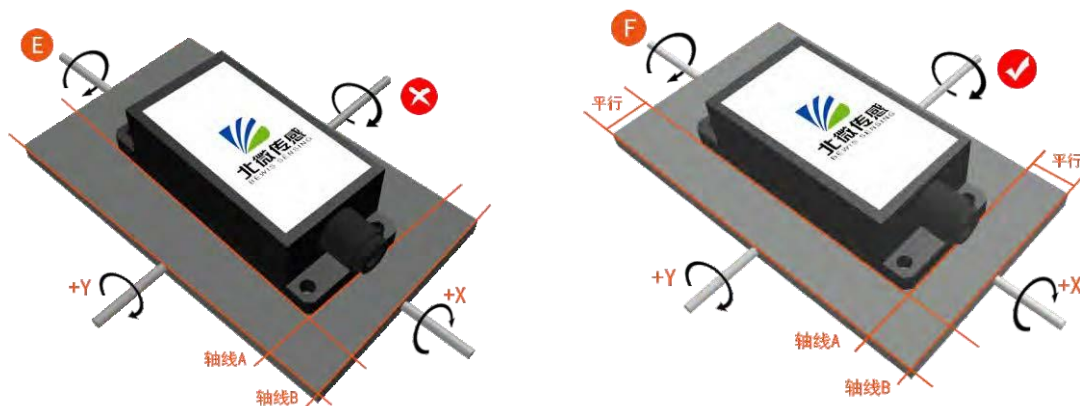


Finally, the mounting surface of the sensor and the surface to be measured must be tightly fixed, smooth in contact, and stable in rotation, and measurement errors due to acceleration and vibration must be avoided.



Electrical Interface

Wiring Definition

| Wire color function | RED | BLUE | BLACK | GREEN | YELLOW |
|------------------------|-----------------|------|-------|-----------|-----------|
| | 1 | 2 | 3 | 4 | 5 |
| | VCC DC 9-36V | NC | GND | B 485- | A 485+ |

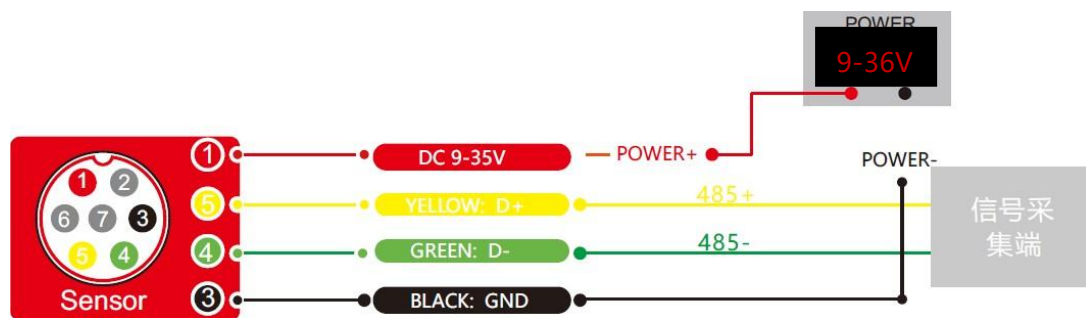




Debugging software

You can download the serial debugging assistant directly on the official website (technical service -> download area), or you can use the more convenient and intuitive host computer software.

BWN826 supporting serial port debugging software can connect the inclination sensor on the computer to display the angle. The software debugging interface is shown in the figure below. Using the tilt angle to debug the host computer, you can conveniently display the current X direction and Y direction tilt angle, and you can also modify and set other parameters.

Step:

- ① Connect the serial port hardware of the inclinometer correctly, and connect the power supply.
- ② Select computer serial port and baud rate and click connect serial port.
- ③ Click start button and the current inclination Angle of the incliner in X and Y directions will be displayed on the screen.

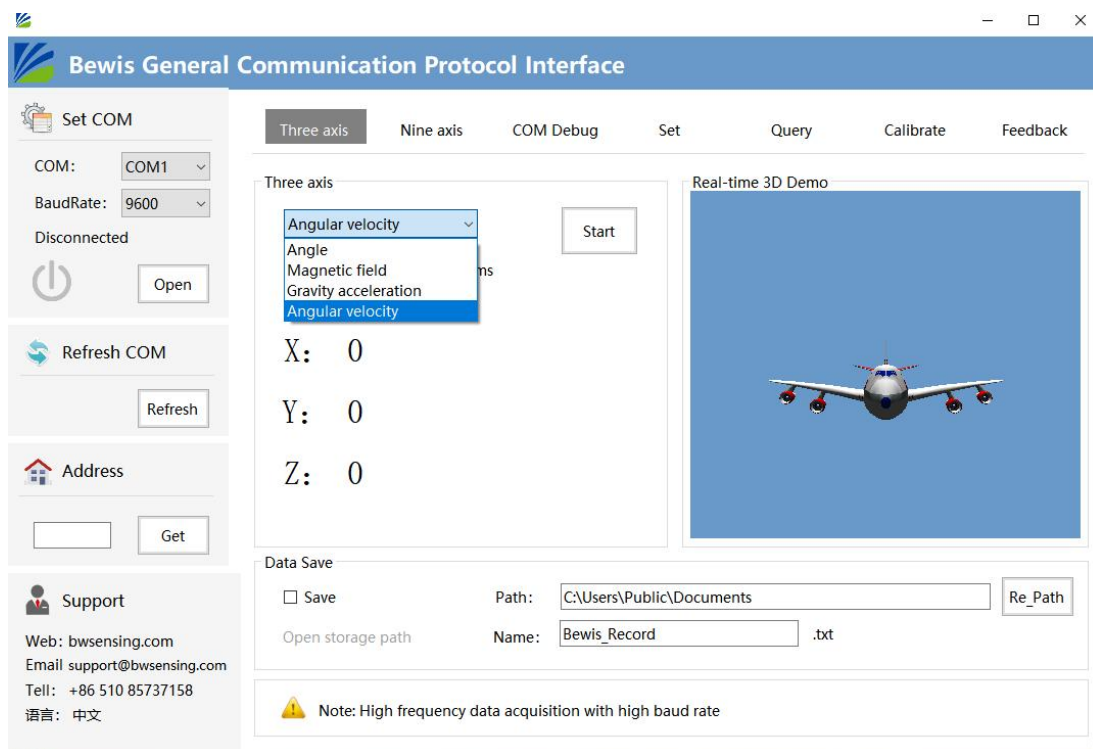

Order information

| Model | Communication mode | Package situation |
|---------------|--------------------|--------------------------|
| BWN826-30-485 | RS485 | IP67 Package/Metal joint |
| BWN826-30-TTL | TTL | IP67 Package/Metal joint |

Executive standard

- Enterprise Quality System Standard: ISO9001:2015 Standard (Certificate No.064-21-Q-3290-RO-S)
- CE certification (certificate number: M.2019.103. U Y1151)
- ROHS (certificate Number: G 190930099)
- GB/T 191 SJ 20873-2003 General specification for inclinometer and level
- GBT 18459-2001 The calculation method of the main static performance index of the sensor
- JJF 1059.1-2012 Evaluation and expression of measurement uncertainty
- GBT 14412-2005 Mechanical vibration and shock Mechanical installation of accelerometer
- GJB 450A-2004 General requirements for equipment reliability
- GJB 909A Quality control of key parts and important parts
- GJB899 Reliability appraisal and acceptance test
- GJB150-3A High temperature test
- GJB150-4A Low temperature test
- GJB150-8A Rain test
- GJB150-12A Sand and dust experiment
- GJB150-16A Vibration test
- GJB150-18A Impact test
- GJB150-23A Tilt and rock test
- GB/T 17626-3A Radio frequency electromagnetic field radiation immunity test
- GB/T 17626-5A Surge (impact) immunity test
- GB/T 17626-8A Power frequency magnetic field immunity test
- GB/T 17626-11A Immunity to voltage dips, short-term interruptions and voltage changes

BWN826 Series

Digital Dual Axis Inclinometer

Wuxi Bewis Sensing Technology LLC

Add: Building 30, NO. 58, Xiuxi Road, Binhu District,
Wuxi City, Jiangsu Province, China

Tel: +86 18921292620

Mail: sales@bwsensing.com

Web: www.bwsensing.com