



# AH500C

High precision  
AHRS

## Technical Manual



## Introduction

AH500C Attitude and Heading Reference System (AHRS) is a high performance, High precision inertial measurement device that measures the attitude parameters (roll and pitch), angular velocity, acceleration information and heading angle of the dynamic carrier. The attitude and angular velocity deviations are estimated by a 6-state Kalman filter with appropriate gain, which is suitable for dynamic measurement of navigation and positioning. The AH500C uses high-quality and reliable MEMS accelerometers, gyroscopes and magnetometers, and guarantees measurement accuracy through algorithms. Meanwhile, the seal design and strict process ensure that the dynamic parameters of the carrier such as the angular velocity, acceleration and attitude can be accurately measured under harsh conditions. Through various compensations such as nonlinear compensation, quadrature compensation, drift compensation, the error source of AH500C can be greatly eliminated, and the product accuracy level can be improved. The AH500C is equipped with digital interface that can be easily integrated into the user's system.

## Feature

- Nonlinear compensation, quadrature compensation
- Dynamic static measurement
- Special offset tracking algorithm eliminates drift
- Gyro drift compensation
- Heading accuracy 0.2°(Max)
- RS232/485/TTL interface output is optional
- temperature range: -40°C~+85°C
- High performance Kalman filter algorithm
- Product size: L60 x W59 x H29 (mm)

## Application

- Satellite tracking
- High voltage tower monitoring
- Aerial work vehicle
- ROV underwater robot navigation
- Drilling equipment measurement and control
- Ocean Tester
- Robot control
- Unmanned aerial vehicle

## Introduction

### Electrical Specifications

Voltage	9-35 V DC
Working current	30mA (40mA Max)
Operating temperature	-40~+85°C
Storage temperature	-55~+100°C

### Performance Specifications

Attitude parameters	Pitch Accuracy	0.1° (RMS, dynamic) 0.01° (RMS, Static)
	Roll accuracy	0.1° (RMS, dynamic) 0.01° (RMS, Static)
	Resolution	0.01°
	Slant Range	Pitch ± 90°, Roll ± 180°
Heading parameters	Heading Accuracy	0.2° (Pitch<40°)
		0.5° (Pitch<60°)
		0.7° (Pitch<80°)
	Resolution	0.01°
Physical characteristics	Size	L60 x W59 x H29 (mm)
	Weight	150g
	Output form	RS232/RS485/TTL
Interface characteristics	Start Delay	< 3s
	Maximum Output Rate	500Hz
	Serial Communication Rate	2400-460800 Baud rate
	Digital Output Format	Binary high performance protocol
Environment	Vibration Resistance	2000g

**Resolution:** The smallest change in the value that the sensor can detect and resolve within the measurement range.



**Accuracy:** The root mean square error of the actual angle and the measured angle of the sensor multiple times (≥16 times).


**Mechanical Characteristic**

Connector	Aviation joint (Line length 1.5m)
Protection level	IP67
Shell material	Magnesium alloy oxidation
Installation	Three M4 screws


**Package size**


Size: L60\*W59\*H29 (mm)

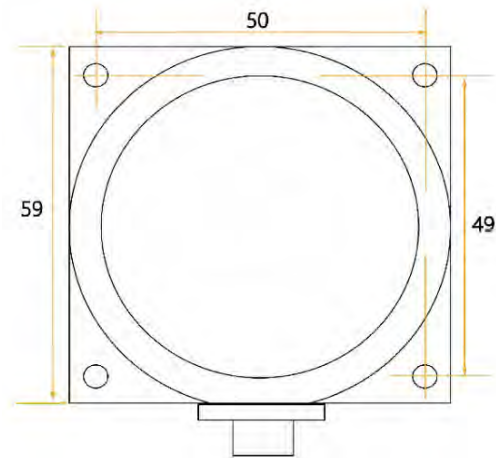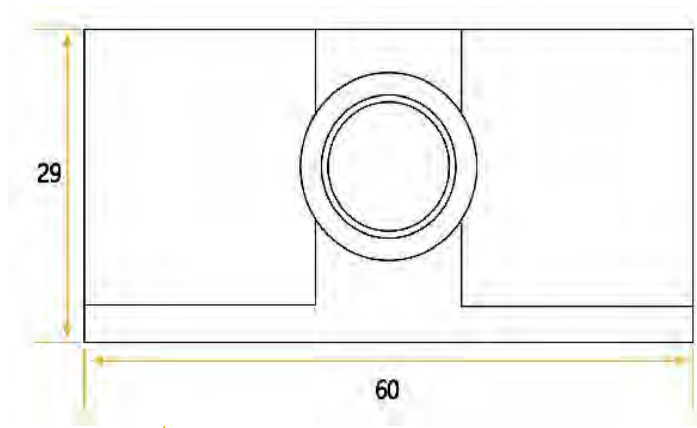

**Bare plate product size**

Size: L44\*W35\*H11 (mm)


Note:  $\pm 1$ mm error for length and width dimensions, please refer to actual size.

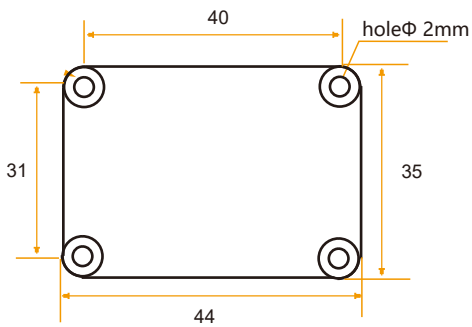


## Product installation

The correct installation method can avoid measurement errors, and the following points should be taken when installing the sensor:

First of all, to ensure that the sensor mounting surface is completely close to the measured surface, the measured surface should be as horizontal as possible, and there should be no angle shown in Figure A and Figure C. The correct installation method is shown in Figure B and Figure D.

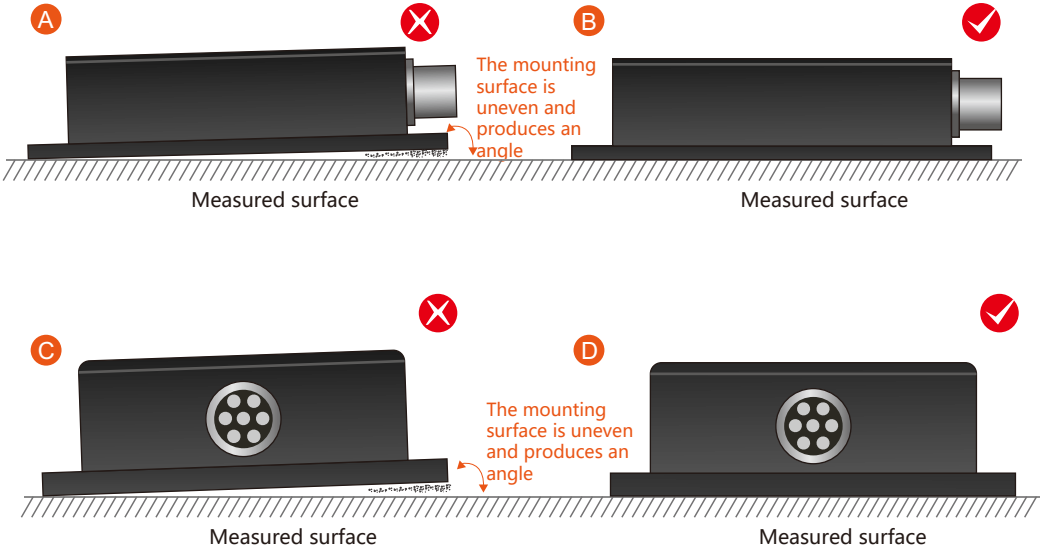

Secondly, the bottom edge of the sensor and the axis of the object to be measured cannot be generated at an angle as shown in Figure E. The bottom edge of the sensor should be kept parallel or orthogonal to the axis of rotation of the object to be measured. This product can be installed horizontally or vertically (vertical installation requires customization), and the correct installation method is shown in Figure F.

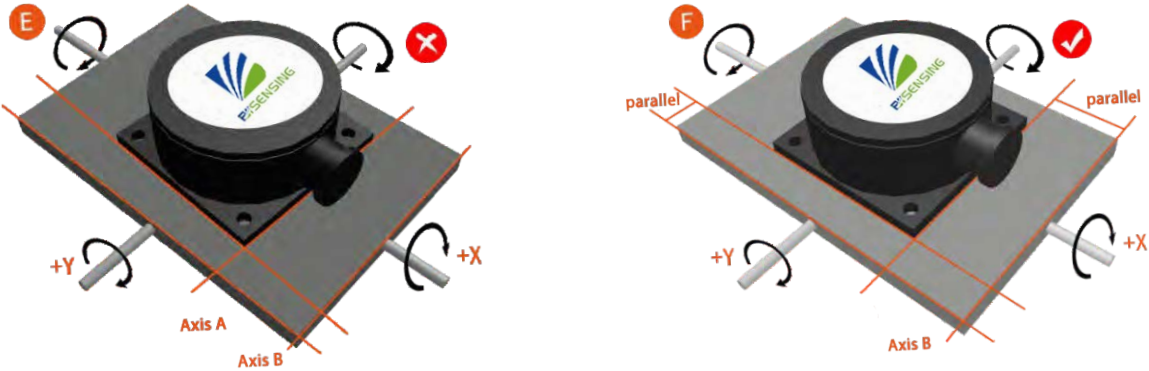

Finally, the mounting surface of the sensor and the surface to be measured must be fixed, the contact is flat, and the rotation is stable. The measurement error caused by acceleration and vibration should be avoided.

## Measurement installation

Although the AH500C can compensate for magnetic interference, the user should select an environment with minimal magnetic interference for installation and use. Try to keep the AH500C away from iron, nickel, magnets, engines and other magnetic materials.

**It is important to strictly avoid the proximity of strong magnetic materials such as magnets and motors to the product, which may cause the measurement accuracy of the product to decrease irreversibly .**

Each AH500C is supplied with a 1.5 m cable and the cable length is optional. The magnetic field environment is different for each installation location and the user must evaluate the installation feasibility of the operating environment.

The recommended test method is to mount the AH500C on a vertically erected aluminum (or other non-magnetic material) rod for heading accuracy measurement (the rotating rod is perpendicular to the rotating platform to avoid large external magnetic field interference).

## Calibration method

The product has been calibrated at the factory. In places where the influence of the magnetic field environment is small, it is not necessary to perform environmental calibration when using it, and it can be used directly. During actual use, it is recommended to perform calibration.

Azimuth calibration step:

### Method 1 - Plane calibration:

1. Connect the product to the system and place the product in a horizontal state;
2. Open the serial port debugging assistant and send 77 04 00 11 15;
3. Rotate the product in the horizontal plane (with the pitch and roll angles within  $\pm 5^\circ$ ) around the z-axis (z-axis is vertical) and rotate 2-3 turns, the rotation process is as slow as possible and rotates at a constant speed. The time of one rotation is controlled between 10 seconds and 15 seconds.
4. Rotate the compass around the X or Y axis. The rotation can be performed at a slow speed and near constant speed. Rotate 2-3 turns around each axis. The rotation time is about 15 seconds.
5. Complete the calibration and send 77 04 00 12 16 to save the calibration.

### Method 2 - Multi-face calibration:

1. Fix the product in the use environment, and try not to carry magnetic items such as keys and mobile phones during calibration;
2. Place the product in a horizontal state (within  $\pm 5^\circ$ );
3. Send the following calibration command in hexadecimal format: 77 04 00 08 0C, return value 77 05 00 88 00 8D;
4. The product is placed horizontally, face up (pitch and roll are within  $\pm 5^\circ$ ), approximate rotates at a uniform speed for one week, and rotation takes more than 10 seconds.
5. The product is placed in a horizontal state with the mounting surface facing up (with a pitch of  $0 \pm 5$  degrees and a horizontal roll of  $180 \pm 5$  degrees), rotate one revolution at a constant speed approximately and use for more than 10 seconds.

6.The product is placed in a vertical state, and the other smooth side of the casing faces downward (the pitch and the roll are both within  $\pm 5^\circ$ ), rotate one revolution at a constant speed approximately and use for more than 10 seconds.

7.The product is placed in a vertical state, and the other smooth side of the casing faces downward (the pitch and the roll are both within  $\pm 5^\circ$ ), rotate one revolution at a constant speed approximately and use for more than 10 seconds.

[Where step 4.5.6.7 can be exchanged];


8.After the four faces have been rotated, send the hexadecimal command 77 04 00 09 0D to save the calibration and return to 77 05 00 89 XX YY. (XX represents the calibration error coefficient, the smaller the value, the better, less than 1 is ideal, FF indicates calibration failure, and YY is the checksum of the command);

9.Calibration completed.


## Electrical connections

### Wiring definition

Cable color & function	RED	BLUE	BLACK	GREEN	YELLOW
	1	2	3	4	5
	VCC DC 9-35V	NC	GND	RXD (B、D-)	TXD (A、D+)

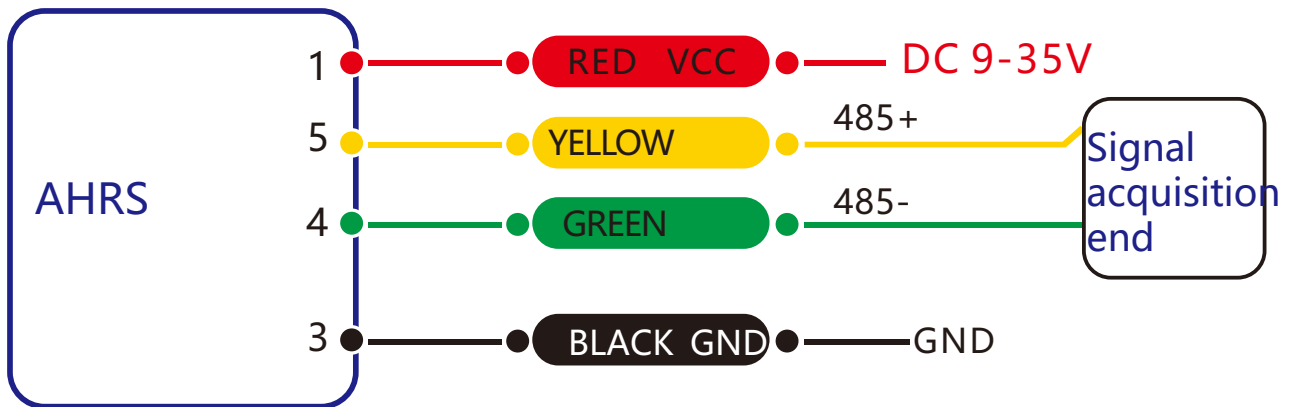

RS485 wiring diagram

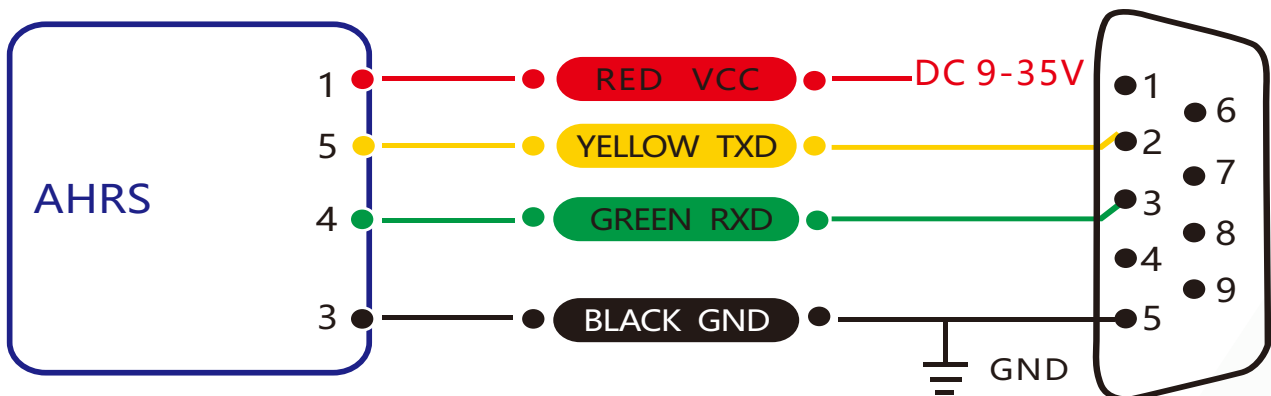

RS 232 wiring diagram

The RS232 interface needs to connect the ground wire of the product, the ground wire of the serial device, and the power ground.

## Protocol

**1 Data Frame Format:** (8 data bits, 1 stop bit, No parity check, default baud rate 9600)

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (Xbyte)	Checksum (1byte)
0x77					

**Data Format:** Hexadecimal

**Identifier:** Fixed to 77

**Frame Length:** Length from Frame Length to Checksum (included)

**Address Code:** Address of acquiring module, default 0x00

**Data:** Content and length variable according to Command

**Checksum:** The sum of the data length, address code, command word and data field hexadecimal (if there is a carry, only the last two digits are taken).

**Note:** The checksum will change when the command word or data field changes. Change the checksum accordingly when you change the data field. For the product's change settings, you will need to send the save settings command after the change. Otherwise, if the power is turned back on, the previous setting items will disappear, and the baud rate will not be saved and will take effect immediately after the change.

## 2 Command Format:

### 2.1 Read PITCH angle Command: 77 04 00 01 05

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	0x04		0x01		

#### Command response:

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (3byte)	Checksum (1byte)
0x77	0x07		0x81	SXXX.YY	

Note: Data represents 4 byte angle value in format of compressed BCD code. S is the sign bit (0 means positive, 1 means negative), XXX is the three digit integer part, YY is the fractional part. The Data of other axis is the same format. For example, 10 26 87 means -026.87 °.

### 2.2 Read ROLL roll angle command: 77 04 00 02 06

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	04		0x02		

#### Command response:

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (3byte)	Checksum (1byte)
0x77	0x07		0x82	SXXX.YY	



### 2.3 Read Heading azimuth angle Command: 77 04 00 03 07

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	0x04		0x03		

#### Command response:

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (3byte)	Checksum (1byte)
0x77	0x07		0x83	SXXX.YY	

### 2.4 Read PITCH,ROLL,HEADING axis angle Command: 77 04 00 04 08

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	0x04		0x04		


#### Command response:


Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (9byte)	Checksum (1byte)
0x77	0x0D		0x84	3 groups SXXX.YY	

The data field consists of 9 bytes, which are Pitch, Roll and Heading angle values. The compressed BCD code is a group of every three bytes. For example, the return command is 77 0D 00 84. 10 26 80 00 33 65 03 13 71 66, where Pitch is 10 26 80 and Roll is 00 33 65, Heading is 03 13 71. For the three bytes of the return value for each angle, the format is SX XX YY, S is the sign bit (0 positive, 1 negative), XXX is the three-digit integer value, and YY is the decimal value. The corresponding three angle readings for this example are: -26.8°, 33.65°, 313.71°.

Command parsing:

Send command: 77 04 00 04 08

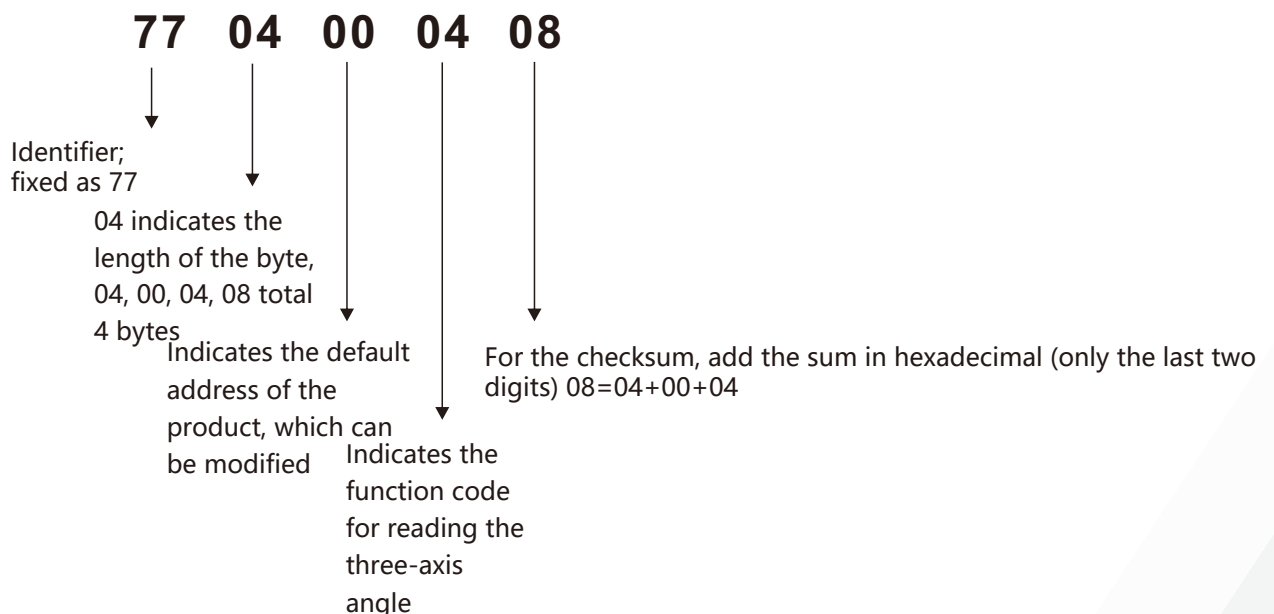

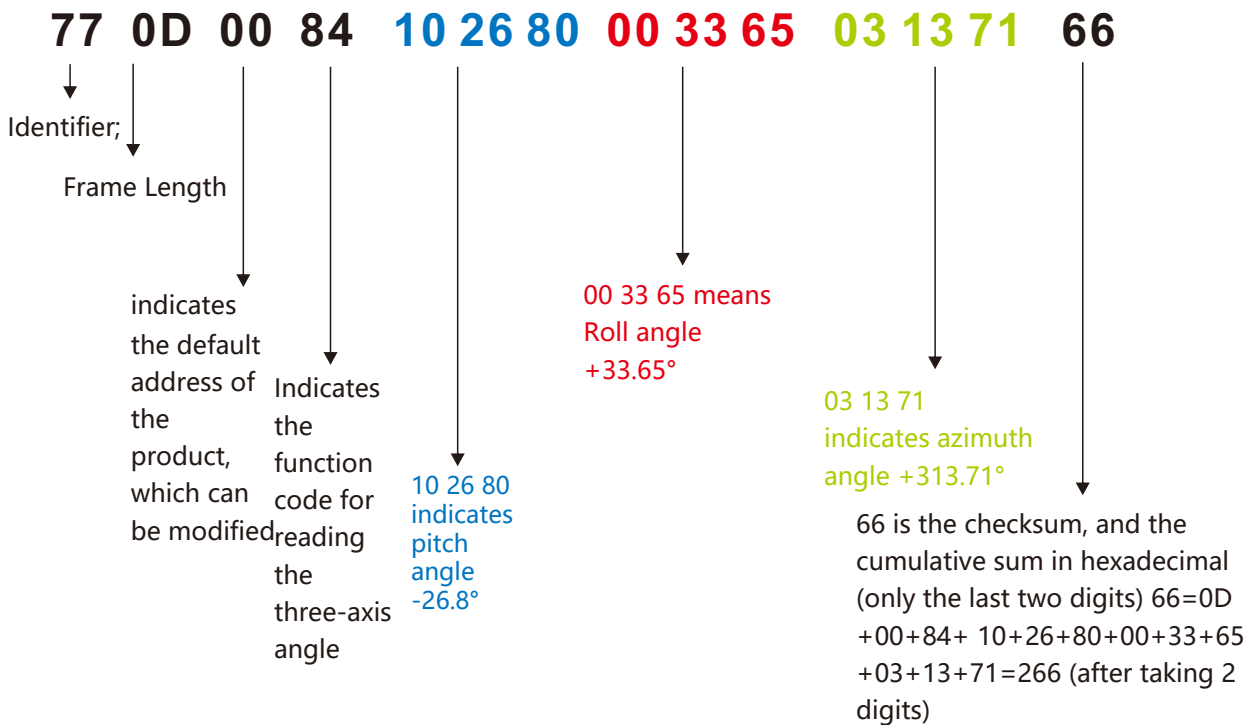**Receiving resolution:**

**2.5 Set the communication rate send command: 77 05 00 0B 02 12**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (1byte)	Checksum (1byte)
0x77	0x05		0x0B	XX	

**Command response:**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (1byte)	Checksum (1byte)
0x77	0x05		0x8B		

Note: The data field XX sent is the baud rate option:

- 00 indicates 2400,
- 01 indicates 4800,
- 02 indicates 9600,
- 03 indicates 19200,
- 04 indicates 115200,
- 05 indicates 38400,
- 06 indicates 7600,
- 07 indicates 460800

Changing the baud rate does not require a save command to be sent and takes effect immediately.

**2.6 Set the magnetic declination send command: 77 06 00 06 02 08 16**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (2byte)	Checksum (1byte)
0x77	0x06		0x06	SX XY	

**Command response:**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (2byte)	Checksum (1byte)
0x77	0x06		0x86	00	

Note: S indicates a symbol, 0 is positive 1 is negative, XX is a two-digit integer, and Y is 1 decimal. For example, 02 08 is +20.8°.

The magnetic declination indicates the angle between the azimuth and the geomagnetism, which is also equivalent to setting the magnetic declination angle + the measured azimuth = product output azimuth.

**2.7 Read magnetic declination send command: 77 04 00 07 0B**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	0x04		0x07		

**Command response:**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (2byte)	Checksum (1byte)
0x77	0x06		0x87	SX XY	

**2.8 Set module address send command: 77 05 00 0F 01 15**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (1byte)	Checksum (1byte)
0x77	0x05	Pre-modification address	0x0F	new address	

**Command response:**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (1byte)	Checksum (1byte)
0x77	0x05	new address	0x8F	00	

Note: For example, sending the following command "77 05 00 0F 0A 1E" means changing the product address from hexadecimal address 00 to 0A.

**2.9 Query current address send command: 77 04 00 1F 23**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	0x04	0x00	0x1F		23

**Command response:**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (1byte)	Checksum (1byte)
0x77	0x05	new address	0x1F	new address	

Note: The Query Address command is a fixed command.

### 2.10 Set the output frequency send command: 77 05 00 0C 00 11

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (1byte)	Checksum (1byte)
0x77	0x05		0x0C	XX	

#### Command response:

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (1byte)	Checksum (1byte)
0x77	0x05		0x8C	00	

Note: The data field XX sent is the automatic output frequency option: 00 indicates the answer mode.,

01 means 5Hz automatic output corresponding data type parameter      06means 100Hz automatic output corresponding data type parameter  
 02 means 10Hz automatic output corresponding data type parameter    07means 200Hz automatic output corresponding data type parameter  
 03 means 20Hz automatic output corresponding data type parameter    08means 500Hz automatic output corresponding data type parameter  
 04 means 25Hz automatic output corresponding data type parameter  
 05 means 50Hz automatic output corresponding data type parameter

1. When the automatic output frequency setting is high, the baud rate needs to be set to a high baud rate;
- 2.The automatic output data type parameter is determined according to the following data type selection command. The default is the automatic output angle.

### 2.11 Query gravitational acceleration g value send command: 77 04 00 54 58

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	0x04		0x54		

#### Command response:

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (9byte)	Checksum (1byte)
0x77	0x0D		0x54	3 groups SXYYYY	

Note: The data field is the value of the g value of pitch, roll, Z axis (perpendicular to the horizontal plane), consisting of 1 bit sign bit + 1 bit integer bit + 4 decimal places

For example, the return value is 77 0D 00 54 10 01 51 00 04 47 11 05 00 24 respectively: -0.0151g, 0.0447g, -1.05g.

### 2.12 Query magnetic field value send command: 77 04 00 55 59

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	0x04		0x55		

#### Command response:

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (9byte)	Checksum (1byte)
0x77	0x0D		0x55	3groups SYYYYY	

Note: The data field is the pitch, roll, Z axis (perpendicular to the horizontal plane), the 1-bit sign + 5 decimal places, the unit is Gauss.

For example, the return value is 77 0D 00 55 11 55 25 00 34 52 13 46 16 E2 respectively: -0.15525, 0.03452, -0.34616.

### 2.13 Query angular velocity send command: 77 04 00 50 54

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	0x04		0x50		

#### Command response:

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (9byte)	Checksum (1byte)
0x77	0x0D		0x50	3 groups SXXXXY	

Note: The data field is the angular velocity of the pitch, roll, and Z axis (perpendicular to the horizontal plane). It consists of 1 sign bit + 3 integer bits + 2 decimal places.

For example, the return value is 77 0D 00 50 01 13 92 04 99 52 10 21 78 9B , then the data field parts are respectively represented Pitch angular velocity: +113.92°/s, roll angular velocity +499.52°/s, Z-axis angular velocity: -21.78°/s.

### 2.14 Save Settings send command: 77 04 00 0A 0E

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	0x04		0x0A		

#### Command response:

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (1byte)	Checksum (1byte)
0x77	0x05		0x8A	0x00	

Note: 1. For parameter modification settings, you need to send the save command again. If the save setup command is not sent after the setup is completed, these settings will disappear after power off.

2.Except for the baud rate setting, the rest will send a save command.

### 2.15 Clear magnetic calibration data send command: 77 04 00 10 14

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	0x04		0x10		

#### Command response:

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (1byte)	Checksum (1byte)
0x77	0x05		0x90	0x00	

Note: This command is to clear the magnetic calibration data made by the user.

**2.16 Quaternion send command: 77 04 00 57 5B**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	0x04		0x57		

**Command response:**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (16byte)	Checksum (1byte)
0x77	0x14		0x57	4 groups SXXXXXX	

Note: The data field contains 16 bytes, 4 bytes are a group, respectively quaternary q0, q1, q2, q3, which is a compressed BCD code, the format is SX YY YY YY,  
 S is a 1-bit sign bit (0 positive, 1 negative), X is a 1-bit integer bit, and YYYYYY is a 6-digit decimal place. For example, if the return command 77 14 00 57 00 99 99 96 00 00 02 90 10 00 26 73 10 00 00 01 7F, the quaternion data is: where q0 is 00 99 99 96, which means 0.999996

- Q1 is 00 00 02 90, which means 0.000290
- q2 is 10 00 26 73, which means -0.002673
- q3 is 10 00 00 01, which means -0.000001

**2.17 read Three-Axis Gyro Three-Axis Accelerometer Three-Axis Magnetometer quaternion command: 77 04 00 59 5B**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (0byte)	Checksum (1byte)
0x77	0x04		0x59		

**Command response:**

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (52byte)	Checksum (1byte)
0x77	0x38		0x59	Data	

Note: The data field part contains 52 bytes, which are angle, acceleration g value, angular velocity, magnetic field value, quaternion, which are compressed BCD codes, and quaternion is the last 16 bytes of the data part, four words. The section is a group, a total of 4 groups, and the rest is a group of 3 bytes. For specific analysis methods, see the data field of each individual query return value. Such as the return value:

```
77 38 00 59 10 13 15 00 25 58 02 51 87
10 18 07 10 28 16 01 02 65
10 06 48 01 24 13 00 03 88
01 59 62 01 63 91 14 14 58
10 22 83 75 10 18 33 49 10 16 55 78 00 93 99 14 58
```

Then: the three axis angles are: -13.15°, +25.58°, +25  
 The g values of the three axes are: -0.1807g, -0.2816g, +1.0265g;  
 The three-axis angular velocities are: -6.48°/s, +124.13°/s, +3.88°/s;  
 The three-axis magnetic field values are: +0.15962, +0.16391, -0.41458;  
 The quaternions are: -0.228375, -0.183349, -0.165578, 0.939914.

### 2.18 Automatic output data type setting send command: 77 05 00 56 00 5B

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (1byte)	Checksum (1byte)
0x77	0x05		0x56	XX	

#### Command response:

Identifier (1byte)	Frame Length (1byte)	Address Code (1byte)	Command (1byte)	Data (1byte)	Checksum (1byte)
0x77	0x05		0x56	00	

\*Note: Data field XX corresponds to the output data type:

- 0x00: Automatically output three-axis attitude data, output format reference read three-axis angle Data 2.4
- 0x01: Automatic output three-axis accelerometer, output format reference reading accelerometer Data 2.11
- 0x02: automatic output three-axis gyroscope data, output format reference reading gyroscope Data 2.13
- 0x03: automatic output three-axis magnetometer data, output format reference reading magnetic Data 2.12
- 0x04: automatic output quaternion, output format reference reading quaternion Data 2.16
- 0x05: Automatically output all data, including (three-axis attitude, accelerometer, gyroscope, magnetometer quaternion), output format reference read nine-axis Data 2.17

## Ordering Information

Product number	way of communication	Package condition
AH500C-232	RS232	IP67 package / aviation connector
AH500C-485	RS485	IP67 package / aviation connector
AH500C-TTL	TTL	IP67 package / aviation connector

## Executive standard

- Enterprise Quality System Standard: ISO9001:2008 Standard (Certificate No.10114Q16846ROS)
- CE certification (certificate number: 3854210814)
- ROHS (certificate number: SO81426003)



# AH500C

High precision  
AHRS

## Wuxi Bewis Sensing Technology LLC

Address: Building 30, No. 58 Xiuxi Road, Binhu District, Wuxi City, Jiangsu Province, China

Tel/Whatsapp: +86 17606 118 008

Email: [support@bwsensing.com](mailto:support@bwsensing.com)

Website: [www.bwsensing.com](http://www.bwsensing.com)