



BWL316S Series

Digital Single Axis Inclinometer

Technical Manual





Introduction

BWL316S is a low-cost, small-volume, single-axis inclinometer with Digital output developed and produced by BWSENSING. It adopts a mature industrial-grade MEMS accelerometer with a measurement range of ±180°, the highest accuracy of 0.1°, and an operating temperature of -40°C. +85°C, small size and light weight, it can meet the application requirements with limited space. This product converts the change of the static gravity field into the change of the inclination angle, and directly outputs the horizontal inclination value digitally. It has the characteristics of low cost, small temperature drift, simple use, and strong anti-interference ability. It is photovoltaic power generation, pan-tilt control, Ideal for inclination measurement in industries such as tower monitoring!

Main Feature

• Single axis tilt measurement

Resolution: 0.01°

Power supply: 9-36V

• Volume: L55*W37*H24 (mm)

• Highest accuracy: 0.1°

• Range: ±180°

• Output: RS232/RS485/TTL for optional

• IP67 Protection level

Application

• Industrial automatic leveling

Medical instruments

Photovoltaic automatic tracking

• Tower tilt monitoring

Special valve

Oil drilling equipment

• Industrial converter

• Lifting equipment inclination control

Product Feature



Technical Index

Parameter	Condition	Minimum	Typical value	Maximum
Power voltage(V)		9	12	36
Operating current(mA)	No load	20	30	40
Operating temperature(°C)		-40		85
Storage temperature(°C)		-55		100



Performance Index

Measurement Range (°)	Condition	±180	
Measurement axis		X	
Accuracy(°)	Room temperature	0.1	
Resolution(°)	Completely still	0.01	
Start-up time		< 3s	
Output frequency (Hz)	5-100Hz adjustable	Up to 100	
Mean time between failures MTBF	≥90000 h		
Electromagnetic compatibility	According to GBT17626		
Insulation resistance	≥100 MΩ		
Impact resistance	2000g, 0.5ms, 3times/ axis		
Weight (g)	210 (Without outer packaging)		

Resolution: The smallest change value of the measured value that the sensor can detect and distinguish within the measurement range.

Accuracy: The root mean square error of the actual angle and the sensor measuring angle for multiple (≥16 times) measurements.


Mechanical Index

Connector	Metal joint (Cable 1.5m)		
Protection level	IP67		
Shell material	Magnesium aluminum alloy oxidation		
Installation	Three M4 screws		




Package product size

Product size: L55*W37*H24 (mm)

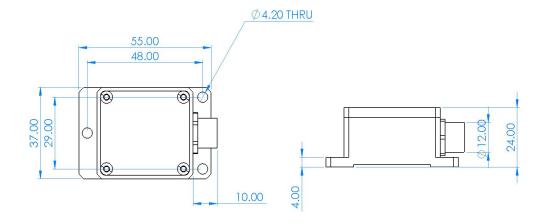

Bare board product size

Product size: L33*W27*H6 (mm) The length and width may have an error of ±1mm, please refer to the actual product

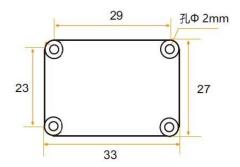




Installation


The correct installation method can avoid measurement errors. When installing the

sensor, please do the following:

First of all, make sure that the sensor mounting surface is completely close to the measured surface, and the measured surface should be as level as possible. There should be no included angles as shown in Figure A and Figure C. The correct installation method is shown in Figure B and Figure D.

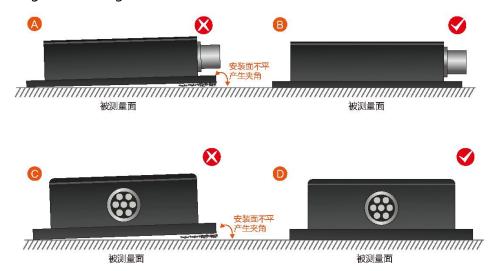

Secondly, the bottom line of the sensor and the axis of the measured object cannot have an angle as shown in Figure E, and the bottom line of the sensor should be kept parallel or orthogonal to the axis of rotation of the measured object during installation. This product can be installed horizontally or vertically (vertical installation needs to be customized), and the correct installation method is shown in Figure F.

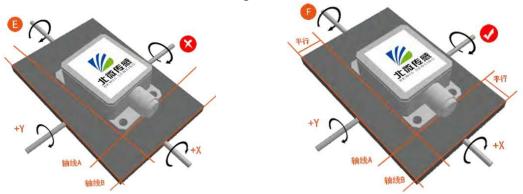


Finally, the mounting surface of the sensor and the surface to be measured must be tightly fixed, smooth in contact, and stable in rotation, and measurement errors due to acceleration and vibration must be avoided.

Electrical Interface





RS 485 Wiring Diagram

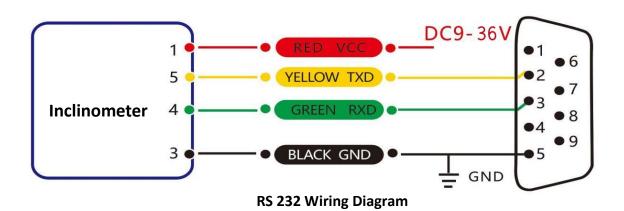


Test software

You can download the serial debugging assistant directly on the official website (technical service -> download area), or you can use the more convenient and intuitive host computer software.

BWL316S supporting serial port debugging software can connect the inclination sensor on the computer to display the angle. The software debugging interface is shown in the figure below. Using the tilt angle to debug the host computer, you can conveniently display the current X direction and Y direction tilt angle, and you can also modify and set other parameters.

Step:

- Connect the serial port hardware of the inclinometer correctly, and connect the power supply.
- Select computer serial port and baud rate and click connect serial port.
- 3 Click start button and the current inclination Angle of the incliner in X and Y directions will be displayed on the screen.

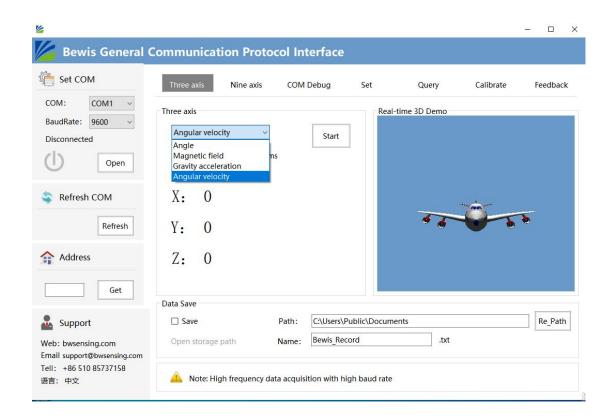

Order information

Model	Communication mode	Package situation
BWL316S-180-485	RS485	IP67 Package/Metal joint
BWL316S-180-232	RS232	IP67 Package/Metal joint
BWL316S-180-TTL	TTL	IP67 Package/Metal joint

Executive standard

- National Standard (Draft) for Static Calibration of Dual Axis Inclinometer Sensors
- GB/T 191 SJ 20873-2003 General Specification for Tiltmeters and Levelling Devices

BWL316S Series

Digital Single Axis Inclinometer

Wuxi Bewis Sensing Technology LLC

Add: Building 30, NO. 58, Xiuxi Road, Binhu District,

Wuxi City, Jiangsu Province, China

Tel: +89 18921292620

Mail: sales@bwsensing.com

Web: www.bwsensing.com