

## **BWN466 Series**

**Digital Dual Axis Inclinometer** 

## **Technical Manual**



#### **BWN466**

#### **Digital Dual Axis Inclinometer**







#### Introduction

BWN466 is a cost-effective digital dual-axis inclinometer launched by Bewis. The output mode is RS485 and TTL optional. It can be used vertically or horizontally. The product adopts the latest technology micro-electromechanical production process inclination unit, which is small in size, low in power consumption, and high in consistency and stability. Because it is a digital inclinometer, the linearity is easier to be corrected. The working temperature reaches industrial level -40°C+85°C, and it is very cost-effective.

When multiple sections are used in cascade, our company provides a multi-section

When multiple sections are used in cascade, our company provides a multi-section inclinometer algorithm, which can achieve accurate displacement measurement of larger lengths and deeper depths, and provides automatic calibration algorithms.

#### **Main Feature**

• Dual axis Inclination measurement

• Range: ±90°

Highest accuracy: 0.02°

• Wide voltage input: 9-36V

• Output: RS485/TTL optional

Multi-section cascading

• Wide temperature work: -45°C~+85°C

High vibration resistance > 2000g

Resolution: 0.001°

• PCB size: 67\*20\*8mm

#### **Application**

• Foundation pit monitoring

Soil monitoring

Dam tailings monitoring

Exploration well

Slope monitoring

High-speed rail foundation monitoring

Piling monitoring

• Deep displacement

#### **Product Features**



#### **Electrical Index**

Parameter	Condition	Minimum	Typical	Maximum
Power Voltage(V)		9	12	36
Working Current(mA)	No load	20	30	40
Operating Temperature(°C)		-40	25	85
Storage Temperature (°C)		-55	25	100



#### **Performance index**

Measurement Range (°)	Condition	±90	
Measurement axis		X-Y	
Accuracy(°)	Room temperature	0.02	
Resolution(°)	Completely still	0.001	
Zero temperature drift (°/°C)	-40~85°C	±0.001	
Start-up time		< 3s	
Output frequency (Hz)	5-100Hz adjustable	Up to 100	
Mean time between failures MTBF	≥90000 h/times		
Electromagnetic compatibility	According to GBT17626		
Insulation resistance	≥100 MΩ		
Impact resistance	2000g, 0.5ms, 3 times/axis		

**Resolution:** The smallest change value of the measured value that the sensor can detect and distinguish within the measurement range.

**Accuracy:** The root mean square error of the actual angle and the sensor measuring angle for multiple (≥16 times) measurements.

### Mechanical Index

Connector	Cable hole
Protection level	PCB
Shell material	PCB
Installation	Four M2 screws



#### Package product size

Product size: L67\*W20\*H8 (mm)




#### **BWN466**


#### **Digital Dual Axis Inclinometer**

#### **Electrical interface**

#### **Electrical interfaces**

Cable color	RED	BLUE	BL ACK	GREEN	YELLOW
&	1	2	3	4	5
Function	VCC DC 9-36V	NC	GND	B 485-	A 485+

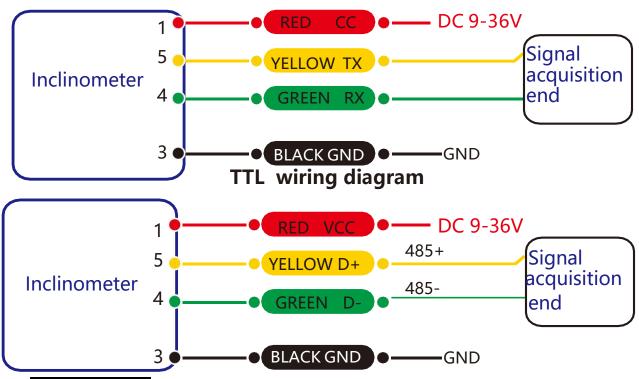

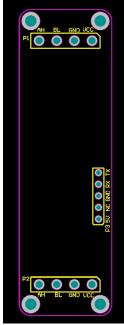

#### **RS485** wiring diagram

Note: P1 and P2 are the same for the numbered wiring, and RX and TX of P3 are the receiving and transmitting ends of TTL;

When RS485 is selected, VCC (9 $\sim$ 35V) of P1 or P2, GND, AH(485+), BL(485-) can be connected;

When TTL is selected, connect VCC (9~35V) of P1 or P2, GND, RX and TX of P3, TX (transmitting end) of the receiving end is connected to RX (receiving end) of sensor P3, and RX (receiving end) of receiving end is connected to TX of sensor P3 (transmitting end)

#### **Debugging Software**

You can download the serial debugging assistant directly on the official website (technical service -> download area), or you can use the more convenient and intuitive host computer software.

BWN466 supporting serial port debugging software can connect the inclination sensor on the computer to display the angle. The software debugging interface is shown in the figure below. Using the tilt angle to debug the host computer, you can conveniently display the current X direction and Y direction tilt angle, and you can also modify and set other parameters.

#### Step:

- ① Connect the serial port hardware of the inclinometer correctly, and connect the power supply.
- ② Select computer serial port and baud rate and click connect serial port.
- 3 Click start button and the current inclination Angle of the incliner in X and Y directions will be displayed on the screen.





#### **Order information**

Model	Communication code	Package situation	
BWN466-90-485	RS485	PCBA board	
BWN466-90-TTL	TTL	PCBA board	

#### **Executive standard**

- Enterprise Quality System Standard: ISO9001:2015 Standard (Certificate No.064-21-Q-3290-RO-S)
- CE certification (certificate number: M.2019.103. U Y1151)
- ROHS (certificate Number: G 190930099)
- GB/T 191 SJ 20873-2003 General specification for inclinometer and level
- GBT 18459-2001 The calculation method of the main static performance index of the sensor
- JJF 1059.1-2012 Evaluation and expression of measurement uncertainty
- GBT 14412-2005 Mechanical vibration and shock Mechanical installation of accelerometer
- GJB 450A-2004 General requirements for equipment reliability
- GJB 909A Quality control of key parts and important parts
- GJB899 Reliability appraisal and acceptance test
- GJB150-3A High temperature test
- GJB150-4A Low temperature test
- GJB150-8A Rain test
- GJB150-12A Sand and dust experiment
- GJB150-16A Vibration test
- GJB150-18A Impact test
- GJB150-23A Tilt and rock test
- GB/T 17626-3A Radio frequency electromagnetic field radiation immunity test
- GB/T 17626-5A Surge (impact) immunity test
- GB/T 17626-8A Power frequency magnetic field immunity test
- GB/T 17626-11A Immunity to voltage dips, short-term interruptions and voltage changes

## **BWN466 Series**

# Digital Dual Axis Inclinometer

#### **Wuxi Bewis Sensing Technology LLC**

Add: Building 30, NO. 58, Xiuxi Road, Binhu District,

Wuxi City, Jiangsu Province, China

Tel: +86 18921292620

Mail: sales@bwsensing.com

Web: www.bwsensing.com